

TVRCSAT-RS

User's Instruction



Contents

Batteries.....	2
Key functions.....	3
Introduction.....	5
Getting started	5
Setting up your satellite remote control to operate your TV.....	5
BRANDCodes.....	7


Batteries

This product requires 2 AAA batteries.

1. Slide the battery cover away from the body of the remote control.
2. Insert the batteries into the remote control as indicated in the battery compartment.
3. Refit the cover.

After replacement of the batteries it will be necessary to re enter the codes for your devices. Use the inside rear page to record your code numbers for your devices.

Key function

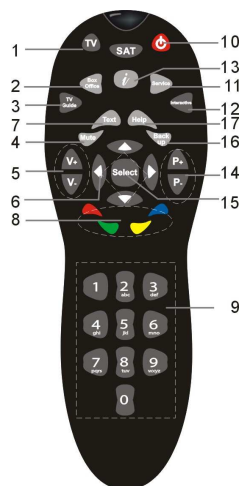

1. **TV:** Sets your TVRCSAT-RS remote control to operate your TV.
2. **Box Office:** Shows the Box Office screen.
3. **TV Guide:** Shows the TV Guide screen.
4. **Mute:** Turns your TV's sound off and on.
5. **V+ and V-:** Changes your TV's volume.
6. **Arrows:** Move the highlight around the screen to select the option you want.
7. **Text:** Switches to text mode.

8. **Colours keys:** Select the corresponding colour options shown on-screen.
9. **Number keys:** Select channel numbers or on-screen options.
10. **Power:** Turns your satellite box (or TV) on and off.
11. **Service:** Shows the Services screen.
12. **Interactive:** Shows the interactive screen.
13. **"i":** Shows information about the program you have highlighted.
14. **P+ and P-:** Changes the channel.
15. **Select:** Selects the option you have highlighted or confirms your choice.
16. **Back up:** Shows the previous screen.
17. **Help:** Shows help on using Satellite Guide.

Introduction

To ensure that your TVRCSAT-RS remote control is correctly set up to work with your equipment, it is very important that you observe the following instruction.

Setting up your TVRCSAT-RS remote control to operate your TV

Your TVRCSAT-RS remote control will also operate your TV. It has a default setting to Sony, so if you have a Sony television, your TVRCSAT-RS remote control should already enable television operation.

To set up your brand of TV please follow these steps:

1. Turn on your TV.
2. Find your TV manufacturer listed in the code list. e.g. Phillips is 0944.
Write down your TV code here [][][][]
[]. If your TV is not listed, press [interactive] and select "Customer Service" for further assistance.
3. Press [TV].
4. Hold down [select] and the red button together for about two seconds, until the red LED on the remote flashes twice.
5. Press [TV] again.
6. Key in the four digit code for your brand of TV. The LED on the remote

control will flash twice. If the LED illuminates only once, re-check the code for your brand of TV and start again at step 3.

7. Press the [Power] button on your remote control. If your TV switches off, press [select]. The LED on the remote control will flash twice. If your TV does not switch off, press [TV], then press the [Power] button. Repeat this (press [TV], then [Power]) until your TV turns off, then press [Select].

To reset your remote control to it's factory settings, press [TV] then hold down [Select] and the [Red] button together for about two seconds, until the red LED on the remote control flashes twice. Then press "981".

BRAND CODE

Brand name	Cod		
		AGB	0008
	e	Agef	0009
A.R.Systems	0000	Aiko	0010
Accent	0001	Aim	0011
Accuphase	0002	Aiwa	0900
Acec	0003	Akai	0901
Adcom	0004	Akiba	0012
Admiral	0005	Akito	0013
Adyson	0006	Akura	0902
Agashi	0007	Alba	0903

Allorgan	0014	Bondstec	0046
Allstar	0015	Boots	0047
Amstrad	0904	BPL	0905
AnamNationa	0016	Brandt	0049
Anglo	0017	BrandtElectroniqu	
Anitech	0018	e	0050
Ansonic	0019	Brinkmann	0051
Apollo	0020	Brionvega	0910
Arcam	0021	Britannia	0052
Ardem	0022	Brother	0053
Aristona	0023	Bruns	0054
ASA	0024	BSR	0055
Asberg	0025	BTC	0056
Asora	0026	Bush	0911
Atlantic	0027	Canton	0057
Atori	0028	Capsonic	0058
Audiosonic	0029	Carad	0059
Audioton	0030	Carrefour	0060
Autovox	0031	Cascade	0061
Axxent	0032	Casio	0062
Baird	0906	Cathay	0063
Bang&Olufsen	0907	Centurion	0064
Barco	0033	Century	0065
BasicLine	0034	CGE	0066
Bastide	0035	Cimline	0067
Beaumark	0036	City	0068
Beko	0908	Clarivox	0069
Beon	0909	Clatronic	0070
Best	0037	CMS	0071
Bestar	0038	CMSHightec	0072
Binatone	0039	Concorde	0073
BlackDiamond	0040	Condor	0074
BlackPanther	0041	ContinentalEdison	0075
Blacktron	0042	Cosmel	0076
Blackway	0043	Crosley	0077
Blaupunkt	0044	Crown	0912
BlueSky	0045	CSElectronics	0078

CTC	0079	Euroman	0113
Cybertron	0080	Europa	0114
Daewoo	0913	Europhon	0115
Dainichi	0081	Expert	0116
Dansai	0082	Fenner	0117
Dansette	0083	Ferguson	0916
Dantax	0084	Fidelity	0917
Datsura	0085	Filsai	0118
Dawa	0086	Finlandia	0918
Daytron	0087	Finlux	0919
Decca	0914	Fisher	0920
deGraaf	0088	Fistline	0119
Denver	0089	FNR	0120
DER	0090	Formenti	0122
Desmet	0091	Formenti-Phoenix	0123
Digiline	0092	Fortress	0124
Dixi	0093	Fraba	0125
Domland	0094	Friac	0126
DTS	0095	Frontech	0127
Dual	0915	Fujitsu	0128
Dumont	0096	FujitsuGeneral	0129
Dunai	0097	Funai	0921
Dynatron	0098	Future	0130
Edison-Minerva	0100	Galaxi	0131
E-Elite	0099	Galaxis	0132
Elbe-Sharp	0101	Galeria	0133
Elekta	0102	GBC	0134
Elin	0103	GeantCasino	0135
Elite	0104	GEC	0136
Elta	0105	Geloso	0137
Emco	0106	GeneralTechnic	0138
Emerson	0107	Genexxa	0922
Erres	0108	Goldfunk	0139
ESC	0109	Goldline	0140
Estele	0110	Goldstar	0923
Etron	0111	Gooding	0141
Eurofeel	0112	Goodmans	0924

Gorenje	0142	Intervision	0174
GPM	0143	Isukai	0175
Graetz	0144	ITC	0176
Granada	0925	ITS	0177
GranPrix	0145	ITT	0930
Grundig	0926	ITTNokia	0178
Haier	0146	ITV	0179
Halifax	0147	Jean	0180
Hampton	0148	JMB	0181
Hanimex	0149	Jubilee	0182
Hantarex	0150	JVC	0931
Hantor	0151	Karcher	0183
Harwood	0927	Kathrein	0184
Hauppauge	0152	KBAristocrat	0185
HCM	0153	Kendo	0186
Hedzon	0154	Kennedy	0187
Hema	0155	Kingsley	0188
Highline	0156	Kiton	0189
Hikona	0157	Kolster	0190
Hinari	0928	Konka	0191
HIT	0158	Kontakt	0192
Hitachi	0929	Korpel	0193
HitachiFujian	0159	Kosmos	0194
HMV	0160	Kotron	0195
Huanyu	0161	Koyoda	0196
Hyper	0162	Kriesler	0197
Hypson	0163	Kuba	0198
Iberia	0164	KubaElectronic	0199
ICE	0165	Kyoshu	0200
Imperial	0166	Kyoto	0201
Indiana	0167	Lasat	0202
Ingelen	0168	Leader	0203
InnoHit	0169	Lecson	0204
Interactive	0170	Lemair	0205
Interbuy	0171	Lenco	0206
Internal	0172	Lesa	0207
International	0173	LevisAustria	0208

Leyco	0209	MitsuriGeneral	0241
LG	0210	Mivar	0242
Liesenk&Tter	0211	Monaco	0243
Lifetec	0212	Morgan's	0244
Loewe	0932	Mtc	0245
Logik	0213	Multitec	0247
Logix	0214	Multitech	0248
Luma	0215	Muphy	0249
Lumatron	0216	Myryad	0250
Luxman	0217	Naiko	0251
Luxor	0218	Nakimura	0252
Madison	0219	Naonis	0253
Magnavox	0220	NEC	0254
Magnum	0221	Neckermann	0255
Mandor	0222	NEI	0938
Manesth	0223	Nesco	0256
Manhattan	0224	Network	0257
Marantz	0225	Neufunk	0258
Mark	0226	NewTech	0259
Masuda	0227	Nicamagic	0260
Matsui	0933	Nikkai	0939
Matsushita	0228	Nobliko	0261
Mcmichael	0229	Nokia	0940
Mediator	0230	Nordmende	0941
Medion	0231	Norfolk	0262
Megas	0232	Normerel	0263
Melectronic	0233	Novak	0264
Melvox	0234	Novatronic	0265
Memorex	0934	Oceanic	0266
Memphis	0235	Odeon	0267
Mercury	0236	Omega	0268
Metz	0935	Onwa	0269
Micromaxx	0237	Orbit	0270
Minato	0238	Orion	0942
Minerva	0239	Orline	0271
Minoka	0936	Ormond	0272
Mitsubishi	0937	Orsowe	0273

Osaki	0274	Pymi	0306
Osio	0275	QuadraVision	0307
OSO	0276	Quelle	0308
Osune	0277	Questa	0309
Pacific	0278	Radiola	0311
Pael	0279	Radiomarelli	0312
Palladium	0280	Radioshack	0313
Panama	0281	Radiotone	0314
Panasonic	0943	Rank	0315
PatheCinema	0282	RankArena	0316
PatheMarconi	0283	RBM	0317
Pausa	0284	Recor	0318
Perdio	0285	Rectiligne	0319
Philex	0286	Rediffusion	0320
Philharmonic	0287	Redstar	0321
Philips	0944	Reflex	0322
Phoenix	0288	Revox	0323
Phonola	0289	Rex	0324
Pioneer	0945	Ricoh	0325
Pionier	0290	R-Line	0310
Plantron	0291	Roadstar	0948
Playsonic	0292	Robotron	0326
Policom	0293	Rowa	0327
Poppy	0294	RoyalLux	0328
Portland	0295	Rukopir	0329
Powerpoint	0296	Saba	0949
Prandoni-Prince	0297	Saccs	0330
Precision	0298	Sagem	0331
Prima	0299	Saisho	0950
Prinz	0300	Saivod	0332
Profex	0301	Sakai	0333
Profi	0302	Salora	0951
Profitronic	0303	Salsa	0334
Proline	0304	Sambers	0335
Prosonic	0305	Samsung	0952
Protech	0946	Sandra	0336
Pye	0947	Sanela	0337

Sansui	0338	Soundwave	0959
Santon	0339	Ssangyong	0369
Sanyo	0953	Standard	0370
Save	0340	Starlite	0371
SBR	0341	Stenway	0372
SchaubLorenz	0342	Stern	0373
Schneider	0954	Strato	0374
Scotland	0343	Stylandia	0375
SEG	0344	SunicLine	0376
SEI	0345	Sunstar	0377
Sei-Sinudyne	0346	Sunwood	0378
Seleco	0955	Superla	0379
Sencora	0347	SuperTech	0380
Sentra	0348	Supra	0381
Sharp	0956	Susumu	0382
Shintoshi	0349	Sutron	0383
Shivaki	0350	Sydney	0384
Siarem	0351	Sysline	0385
Siemens	0957	Sytong	0386
Siera	0352	Tandberg	0387
Siesta	0353	Tandy	0960
Silva	0354	Tashiko	0388
Silver	0355	Tatung	0961
Singer	0356	Tec	0389
Sinudyne	0357	TechLine	0390
Skymaster	0358	Technics	0962
SLX	0359	Technisat	0391
Smaragd	0360	Tedalex	0392
Solavox	0361	Teiron	0393
Sonawa	0362	Teleavia	0394
Soniko	0363	Telecor	0395
Sonitron	0364	Telefunken	0963
Sonneclair	0365	Telefusion	0396
Sonoko	0366	Telegazi	0397
Sontec	0367	Telemeister	0398
Sony	0958	Telesonic	0399
Sound&Vision	0368	Telestar	0400

Teletech	0401	Videologique	0434
Teleton	0402	Videosystem	0435
Televideon	0403	Videoton	0436
Television	0404	Vidikron	0437
Televiso	0405	Viper	0438
Telexa	0406	Visiola	0439
Tensai	0407	Vision	0440
Tenson	0408	Vistar	0441
Tevion	0409	Vortec	0442
Texet	0410	Voxson	0443
Thomson	0964	Watson	0444
Thorn	0965	WattRadio	0445
Thorn-Ferguson	0966	Wega	0446
Tokai	0411	Wegavox	0447
Tokyo	0412	Weltblick	0448
Tomashi	0413	Weston	0449
Toshiba	0967	Wharfedale	0450
Towada	0414	White	
Toyoda	0415	Westinghouse	0451
Trakton	0416	Windstar	0452
TransContinens	0417	WindySam	0453
Transtec	0418	Xrypton	0454
Triad	0419	Yamishi	0455
Trident	0420	Yokan	0456
Tristar	0421	Yoko	0457
Triumph	0422	Yorx	0458
Tvetxt95	0423	Zanussi	0459
Uher	0424	Zenor	0460
Ultra	0425		
Ultravox	0426		
UnicLine	0427		
United	0428		
Univox	0429		
Utax	0430		
Vestel	0431		
Vexa	0432		
Videologic	0433		

Plasma,LCD&PanelTVs

AKAI	0600
BENQ	0601
CORNEA	0602
DAEWOO	0603
DELL	0604
DUKANE	0605
ELITE VIDEO	0606
ENVISION	0607
FUJITSU	0608
GATEWAY	0609
HAIER	0610
HISENSE	0611
HITACHI	0612
INSIGNIA	0613
INTEGRA	0614
JVC	0615
LG	0616
LUCE	0617
MARANTZ	0618
MEGATRON	0619
MITSUBISHI	0620
MONIVISION	0621
MYRON&DAVIS	0622
NEC	0623
NET TV	0624
NORCENT	0625
PANASONIC	0626
PHILIPS	0627
PHILIPS-MAGNAVOX	0628
PIONEER	0629
POLAROID	0630
PRINCERON GRAPHICS	0631
RCA	0632
RUNCO	0633
SAMPO	0634

SAMSUNG	0635
SANYO	0636
SEARS	0637
SHARP	0638
SONY	0639
SUPERSCAN	0640
TATUNG	0641
TEVION	0642
TOSHIBA	0643
VIEWSONIC	0644
VIZIO	0645
WHITE WESTINGHOUSE	0646
YAMAHA	0647
ZENITH	0648
HDTV	
GO VIDEO HDT100	0649
Hitachi 61HDX98B	0650
Hughes HTL-HD	0651
HughesHIRD-E8	0652
LG LSS-3200A	0653
LG HTL-HD	0654
Mitsubishi SR-HD5	0655
Mitsubishi SRHD400	0656
Mitsubishi SRHD500	0657
MOTOROLA HDT100	0658
Philips DSHD800R	0659
Pioneer SH-D505	0660
Proscan PSHD105	0661
RCA HD65W20	0662
RCA PSHD105	0663
RCA DTC-100	0664
RCA DTC-210	0665
Samsung SIR-T165	0666
Samsung SIR-T351	0667
Samsung SIR-TS160	0668
Samsung SIR-TS360	0669
Sony SATHD100	0670

Sony SATHD200	0671
Sony SATHD300	0672
SYLVANIA 6900DTD	0673
Toshiba DST3000	0674
Toshiba DST3100	0675
Toshiba DW65X91	0676
Zenith HDSAT420	0677
Zenith HDSAT520	0678
Zenith DTV1080	0679